





READ AND SAVE THESE INSTRUCTIONS

For replacement Filter's and service contact 1-800-426-2611

Warnings

- 1. Always unplug or disconnect the air cleaner from the power supply before servicing.
- 2. To reduce the risk of electric shock or injury to persons, do not expose to water or rain, and do not use in a window.

Equipment



Fach AeroClear unit comes with (6) carbon pads, (12) pre-filters, and (1) HEPA filter



(1) germicidal UV light

Instructions

Plug unit into a three prong outlet. The AeroClear power switch is located on the side of the unit. Simply push the switch on and the motor will start. For best results position the unit 6 to 12 inches from a wall. The unit does not need to be placed in the middle of the room.

Filter Maintenance

- Always unplug unit before changing filters.
- To replace filters remove the 4 grille pins and grille.
- All filters are disposable. **DO NOT WASH FILTERS.** All filters & UV lights are disposable and can be purchased from MatrixAir.

The pre-filter is located in front of the carbon pad and is white in color. All filters are disposable and cannot be vacuumed or rinsed in water. Peel used filter away, discard and replace with new pre-filter. The pre-filter should be replaced every month. Note the carbon pad is located behind the pre-filter and in front of the HEPA filter and should be replaced every two months.

The HEPA filter is located behind the carbon pad and the pre-filter. The HEPA is a box like disposable filter that easily slides out of the unit. Pull the HEPA filter straight out, discard and replace with a new HEPA. The HEPA filter should be replaced every year. Behind the HEPA filter is the UV light bulb. To remove the UV light bulb remove all the filters, unscrew the UV light bulb and replace with new bulb. Reinstall all filters. The UV light bulb should be replaced yearly.

Cabinet Maintenance

Always unplug unit before cleaning.

The outside cabinet can be cleaned with a damp cloth and wiped dry.