

INTEGRITY

USER MANUAL



MATRIXair
a division of Sol-Air

READ AND SAVE THESE INSTRUCTIONS

For replacement Filter's and service contact 1-800-426-2611

Warnings

1. Always unplug or disconnect the air cleaner from the power supply before servicing.
2. To reduce the risk of electric shock or injury to persons, do not expose to water or rain, and do not use in a window.

Equipment



Each Integrity unit comes with (6) carbon pads, (1) ½ granulated carbon panel, and (1) 3"HEPA filter

Instructions

Plug unit into a three prong outlet. The Integrity power switch is located on the side of the unit. Simply push the switch on and the motor will start. For best results position the unit 6 to 12 inches from a wall. The unit does not need to be placed in the middle of the room.

Filter Maintenance

- Always unplug unit before changing filters.
- **DO NOT WASH FILTERS.**
- To replace filters remove the 4 grille pins and grille.
- All filters are disposable and can be purchased from MatrixAir.

The carbon pad is located in front of the carbon panel and is black in color. All filters are disposable and cannot be vacuumed or rinsed in water. Peel used filter away, discard and replace with new carbon pad. The carbon pad should be replaced every 2 months. Note the carbon panel is located behind the carbon pad and in front of the HEPA filter and should be replaced once a year.

The HEPA filter is located behind the carbon panel and the carbon pad. The HEPA is a box like disposable filter that easily slides out of the unit. Pull the HEPA filter straight out, discard and replace with a new HEPA. The HEPA filter should be replaced every year.

Cabinet Maintenance

Always unplug unit before cleaning.
The outside cabinet can be cleaned with a damp cloth and wiped dry.