

MaxMount Series

USER MANUAL



MATRIXair
a division of Sol-Air

READ AND SAVE THESE INSTRUCTIONS

For replacement Filter's and service contact 1-800-426-2611


Warnings

1. Always unplug or disconnect the air cleaner from the power supply before servicing.
2. To reduce the risk of electric shock or injury to persons, do not expose to water or rain, and do not use in a window.

Equipment



Each MaxMount unit comes with (6) carbon pads, (12) pre-filters, and (1) HEPA filter

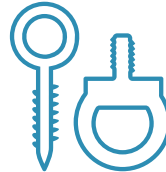

Each unit is equipped with four (4) eye bolts 16" on center and industrial hanging wire for easy installation.

Installation

We recommend installation be performed by a licensed contractor, licensed electrician or equivalent.

STEP 1 After deciding on an installation location, locate the studs, rafters, or joists which the unit will be attached to. Install eye lags 16" on center. Use industrial hanging wire, attach to one eye lag. Make sure wire is tight.

STEP 2 Next attach to eye bolt on machine. Repeat for the remaining three eye lags and bolts. Attach duct work to system, connect power to 120-volt power supply.

Filter Changing*

Pre-Filter: Replace every 3 to 4 weeks.

Carbon Filter: Replace at least every 2 months.

HEPA Filter: Replace at least every 12 months.

*Air Cleaner location and filter maintenance may vary according to each situation.

Pre-Filter

To change Pre-Filter unlatch side door. Remove rods from top of machine. The Pre-Filter is the first filter located in the unit.

DO NOT WASH PRE-FILTERS.

Carbon Filter

The Carbon Filter is located behind the Pre-Filter. Follow Pre-Filter changing instructions from Step 1. Remove used Carbon Filter, discard and replace with new Carbon Filter.

DO NOT WASH CARBON FILTERS.

HEPA Filter

The HEPA Filter is a pleated media surface with a galvanized aluminum frame located behind the Pre-Filter and Carbon Filter. Slip the HEPA Filter out of the system, discard and replace with new H.E.P.A. Filter.

DO NOT WASH HEPA FILTER.